



22	4	Washer	Bricka		05-02-101
21	4	Screw	Skruv		05-04-128
20	5	Screw	Skruv		05-04-46
19	1	Screw	Skruv		See table
18	2	Plug	Plugg		05-03-122
17	1	Key	Nil		05-03-124
16	2	Retaining ring	Låsring		05-34-108
15	1	Retaining ring	Låsring		05-34-118
14	2	Ball bearing	Kullager		05-08-504
13	1	Mech. seal	Mek. tätning		05-20-118
12	1	V-ring	V-ring		05-19-505
11	1	Lip seal	Läpp tätning		05-29-118
10	1	Spacer	Distans		01-42747
9	1	Pedestal	Lagerfot		01-13020
8	1	Wear plate	Slitbricka		01-42423
7	1	Pin	Stift		01-42426
6	1	Gasket	Packning		01-42424
5	1	Impeller	Impeller		See table
4	1	Cam	Kam		See table
3	1	Shaft	Axel		01-35137
2	1	End cover	Lock		01-42422-1
1	1	Body	Pumphus		See table

PUMP NO	PUMP TYPE	DESCRIPTION	THICKNESS	NO	SCREW	IMPELLER	BODY	THREAD
PUMP REPAIRING	PUMPTYP	BENÄMNING	TJOCKLEK	NR	SÄRV	Ø	PUMPHUS	LÅSNING
0-13026-1	F9B-3000	V1	8	01-43137	05-04-108	Ø8-Ø8 B	Ø-11358-1	R 7
0-13026-2	F9B-3000	V2	5,2	01-43138	05-04-127	Ø8-Ø8 B	Ø-11358-1	R 7
0-13026-3	F9B-3000	V3	8	01-43137	05-04-108	Ø8-Ø8 B	Ø-11358-1	R 7
0-13026-4	F9B-3000	V4	5,2	01-43138	05-04-127	Ø8-Ø8 B	Ø-11358-1	R 7
0-13026-5	F9B-3000	V5	8	01-43137	05-04-108	Ø8-Ø8 B	Ø-11358-1	R 7
0-13026-6	F9B-3000	V6	5,2	01-43138	05-04-127	Ø8-Ø8 B	Ø-11358-1	R 7
0-13026-7	F9B-3000	V7	8	01-43137	05-04-108	Ø8-Ø8 B	Ø-11358-1	R 7
0-13026-8	F9B-3007	V8	5,3	01-43135	05-04-127	Ø8-Ø8 B	Ø-11358-2	R 7
0-13026-9	F9B-3007	V9	2	01-43136	05-04-108	Ø8-Ø8 B	Ø-11358-2	R 7
0-13026-10	F9B-3007	V10	5,3	01-43135	05-04-127	Ø8-Ø8 B	Ø-11358-2	R 7
0-13026-11	F9B-3007	V11	5,3	01-43136	05-04-108	Ø8-Ø8 B	Ø-11358-2	R 7
0-13026-12	F9B-3007	V12	4	01-43138	05-04-127	Ø8-Ø8 B	Ø-11358-2	R 7

4	05-04-46	087-05-04-148	031025	4,5
3	0-13026-7	05-04-128	031025	4,5
2	0-13026-4	05-04-108	031025	4,5
1	0-13026-1	05-04-108	031025	4,5

Multipurpose