



22	4	Washer	Bricka		05-02-101	
21	4	Screw	Skruv		05-04-128	
20	5	Screw	Skruv		05-04-46	
19	1	Screw	Skruv		See table	
18	2	Plug	Plugg		05-03-122	
17	1	Key	Nil		05-03-124	
16	2	Retaining ring	Låsring		05-34-108	
15	1	Retaining ring	Låsring		05-34-118	
14	2	Ball bearing	Kullager		05-08-504	
13	1	Mech. seal	Mek. tätning		05-20-118	
12	1	V-ring	V-ring		05-19-505	
11	1	Lip seal	Läpp tätning		05-29-118	
10	1	Spacer	Distans		01-42747	
9	1	Pedestal	Lagerfot		01-13020	
8	1	Wear plate	Slitbricka		01-42426	
6	1	Gasket	Packning		01-42424	
5	1	Impeller	Impeller		See table	
4	1	Cam	Kam		See table	
3	1	Shaft	Axel		01-35137	
2	1	End cover	Lock		01-42422-1	
1	1	Body	Pumphus		See table	
Pos. Qty.		Description	Benämning	Material	Dimension	Drawing nr.

PUMP NO	PUMP TYPE	DESCRIPTION	THICKNESS	NR	SCREW	IMPELLER	BODY	THREAD
PUMP REPAIRING	PUMPTYP	BENÄMNING	TJOCKLEK	NR	SÄRV	IMPELLER	PUMPHUS	LAGNING
0-13026-1	F9B-3000	V1	8	01-43337	05-04-108	08-802 B	0-11358-1	R 7"
0-13026-2	F9B-3000	V2	5,2	01-43338	05-04-107	08-804 B	0-11358-1	R 7"
0-13026-3	F9B-3000	V3	8	01-43337	05-04-108	08-804 B	0-11358-1	R 7"
0-13026-4	F9B-3000	V4	5,2	01-43338	05-04-107	08-804 B	0-11358-1	R 7"
0-13026-5	F9B-3000	V5	8	01-43337	05-04-108	08-802 B	0-11358-2	R 7"
0-13026-6	F9B-3000	V6	5,2	01-43338	05-04-107	08-802 B	0-11358-2	R 7"
0-13026-7	F9B-3000	V7	8	01-43337	05-04-108	08-804 B	0-11358-2	R 7"
0-13026-8	F9B-3007	V8	5,3	01-43335	05-04-107	08-814 E	0-11358-2	R 7"
0-13026-9	F9B-3007	V9	2	01-43336	05-04-108	08-814 E	0-11358-2	R 7"
0-13026-10	F9B-3007	V10	5,3	01-43335	05-04-107	08-814 E	0-11358-2	R 7"
0-13026-11	F9B-3007	V11	5,3	01-43335	05-04-108	08-814 E	0-11358-2	R 7"
0-13026-12	F9B-3027	V12	4	01-43338	05-04-107	08-814 E	0-11358-2	R 7"

4	05-04-46	087-05-04-148	031025	4,5
3	0-13026-7	Am-12	1488001	3,5
2	0-13026-4	1880001	08-802 B	4
1	0-13026-1	1880001	08-802 B	4

Multipurpose