

Electronic Precision Metering Pumps


“Control Freak” Touch-screen Controller

Provides optimum motor speed control based on your desired flow and pressure ratings.

The exclusive new “Control Freak” electronic controller provides motor speed control for Hydra-Cell Metering Solutions pumps (or Hydra-Cell bare shaft pumps) with an easy-to-use touch-screen display.

You can enter the desired flow rate or volume in gallons or liters and system pressure in psi or bar, and the controller automatically runs the pump manually at the desired flow rate, or volume total/time, or in pre-set batches.

Versatile electronic controller allows programming for flow rate or totalization.

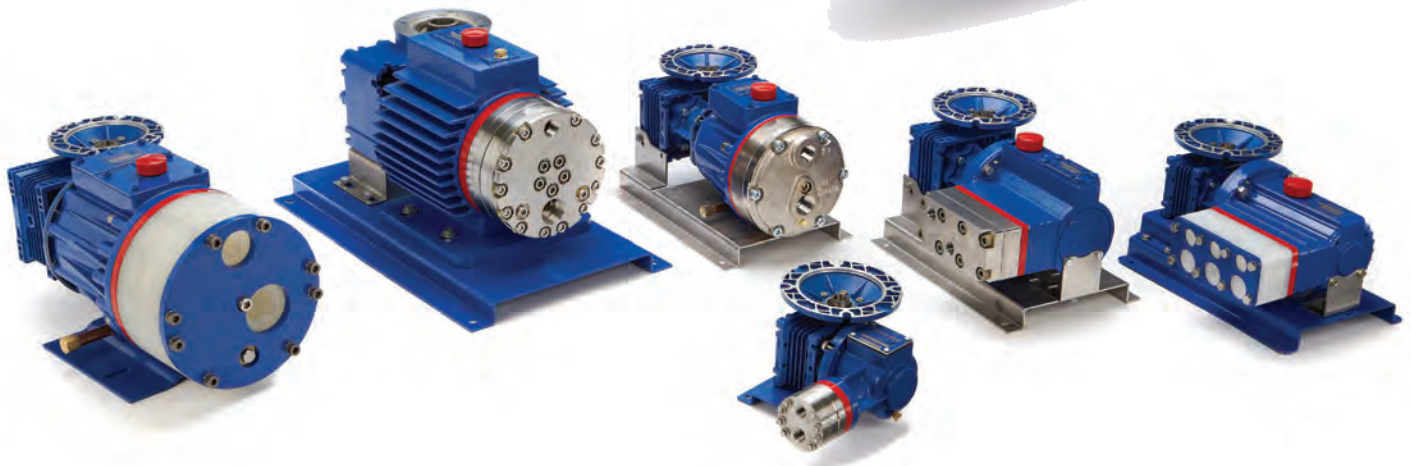

The “Control Freak” electronic controller is designed exclusively for Hydra-Cell Metering Solutions pumps.

“Control Freak” Touch-screen Controller for Metering

- Features 1/2-hp Variable Frequency Drive (VFD) - larger horsepower drives optionally available
- Pre-set (with password protection) for Hydra-Cell pump performance algorithms - can also be field-calibrated for greater accuracy
- 7” color graphic touch-screen user interface in a NEMA-4X enclosure (other enclosures available as option) - easy to operate and visible in low-light areas
- Safety features for emergency stop, loss of power, fault monitoring, and optional pump oil temperature probe
- Pump-drive information screen
- Four configurable on-off relays
- Ten separate batch set-up screens
- Two user-configurable analog input displays
- Analog and digital I/O for interfacing with external devices
- Includes real-time clock
- Option available to control multiple pumps with one Hydra-Cell “Control Freak”
- Versatile - enables programming for flow rate or totalization




Opening screen - touch to activate.



Start-up menu options.



Sample menu for batch operation.

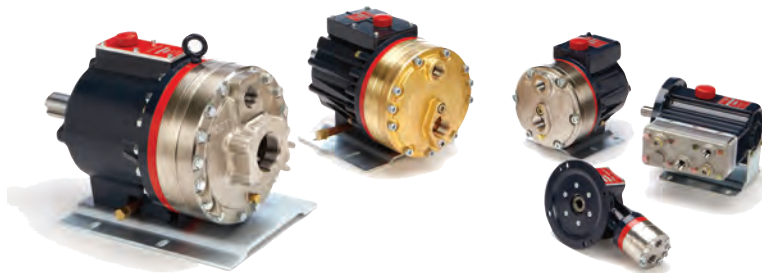

“Control Freak” can also be used for controlling motor speed with Hydra-Cell bare shaft pumps used for metering.



World Headquarters & Manufacturing

Wanner Engineering, Inc.

1204 Chestnut Avenue, Minneapolis, MN 55403 USA

Phone: 612-332-5681 • Fax: 612-332-6937 • Toll-Free Fax (USA): 800-332-6812

Email: sales@wannereng.com • www.Hydra-Cell.com/metering